GVE370
CT370
CT380
CT470

Numatic

numatic.com

Kits
A26A
A40A

Australian

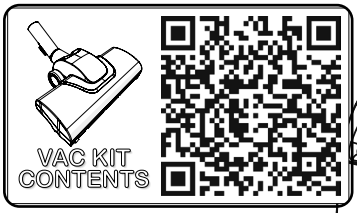

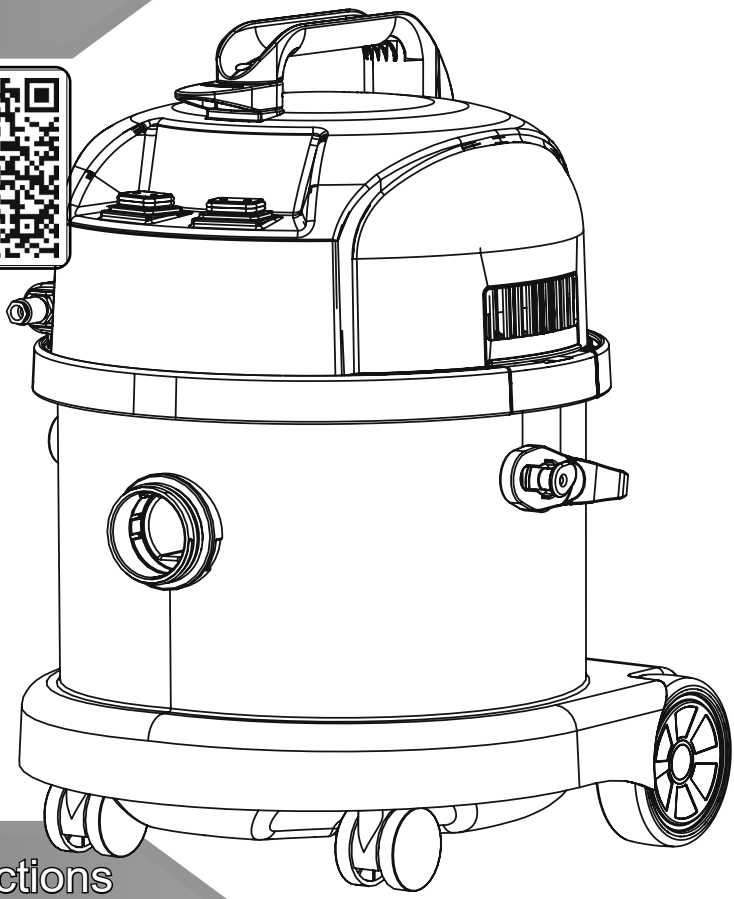

Original Instructions

CAUTION,
Read the Instructions before using the machine.

Edco

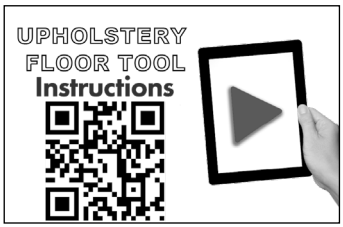

Kit A26A

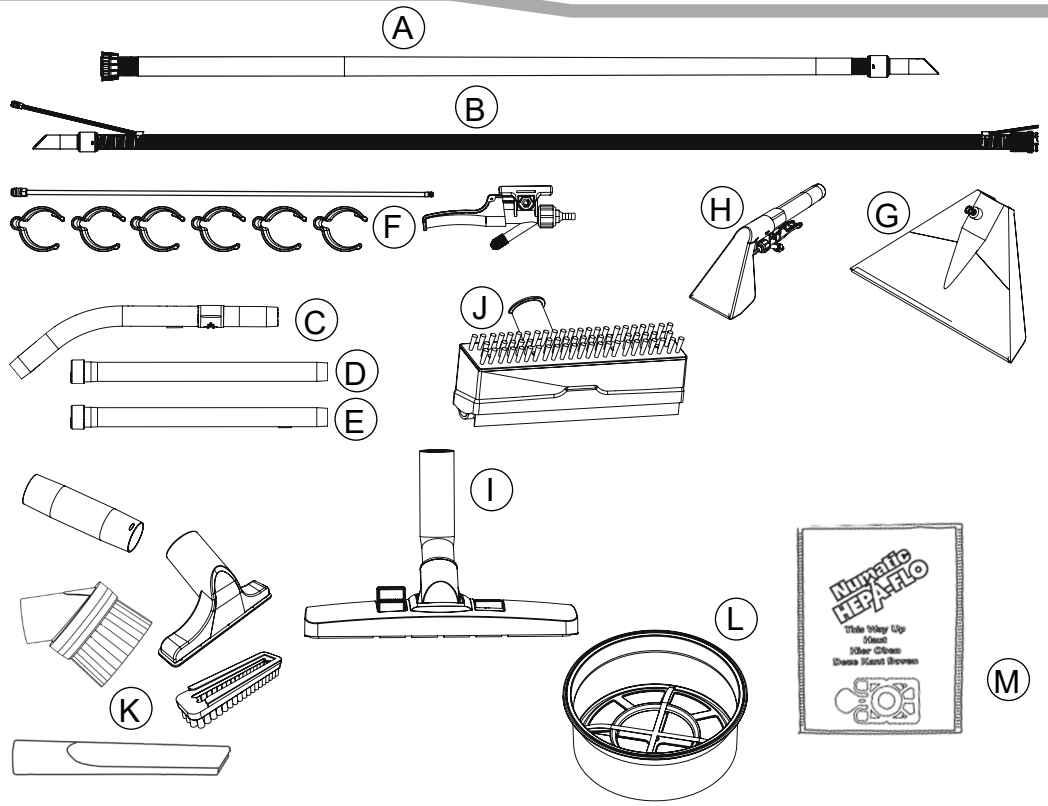

Kit A40A

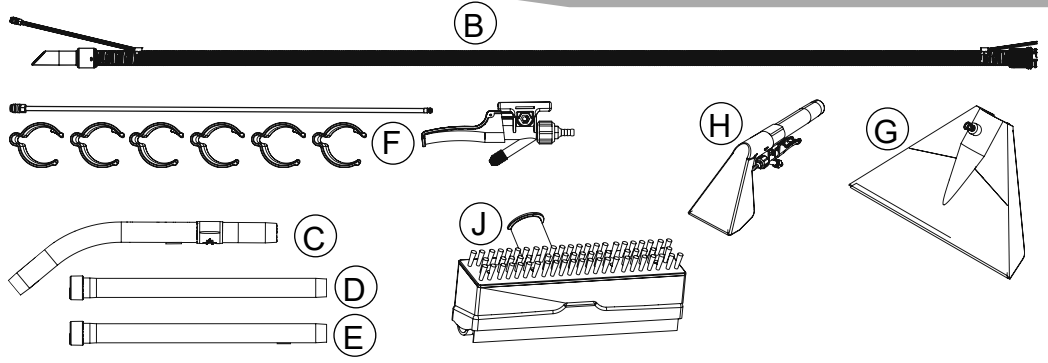

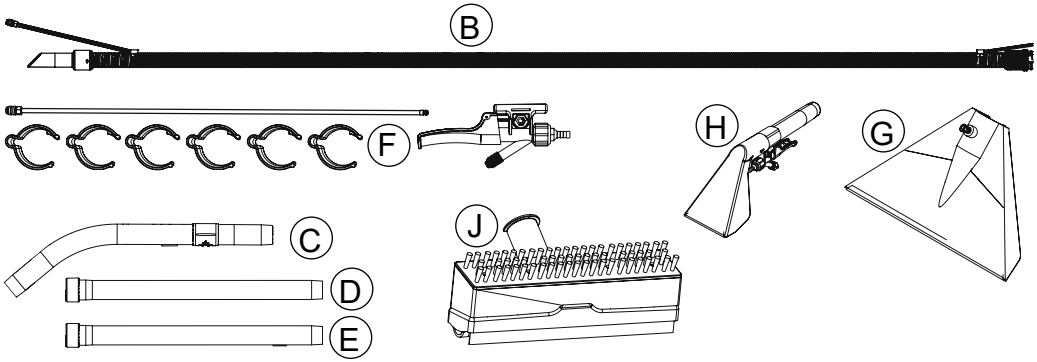
B
F
H
G
C
D
E
J

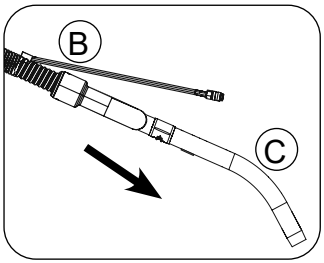
B
C

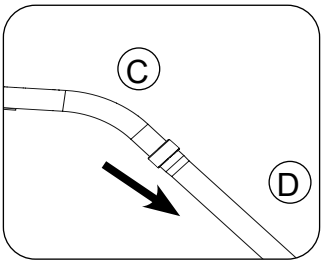
C
D

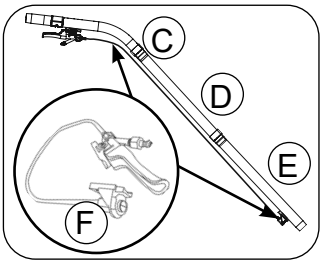
C
D
E
F

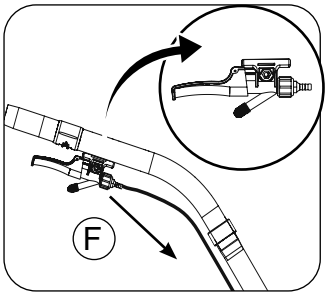
F

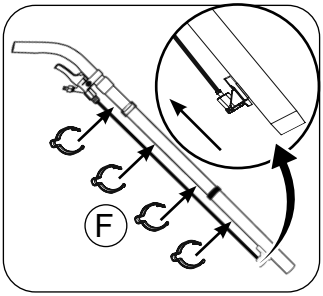
F

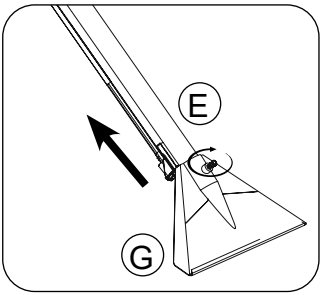
E
G

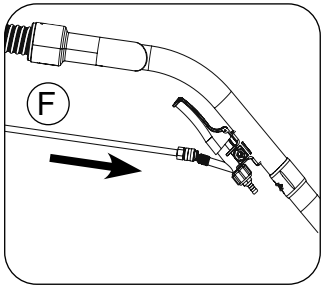
F

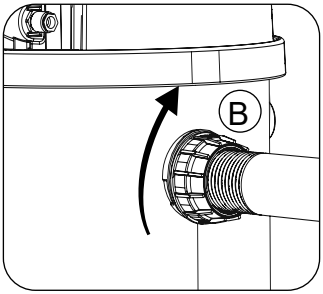
B

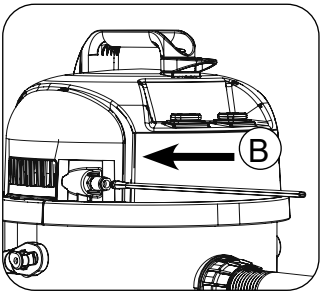
B

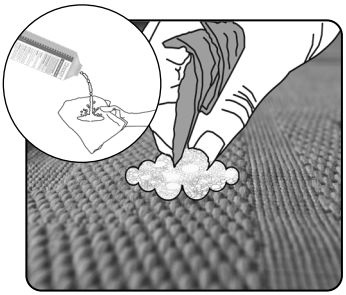

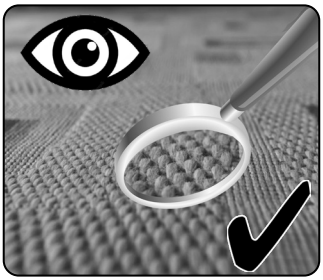

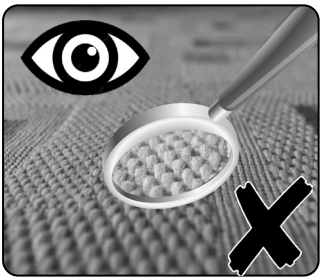

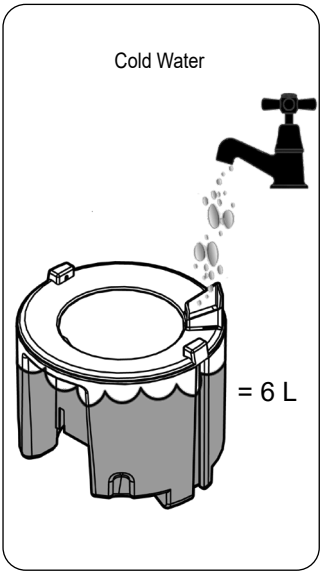
Cold Water
= 6 L

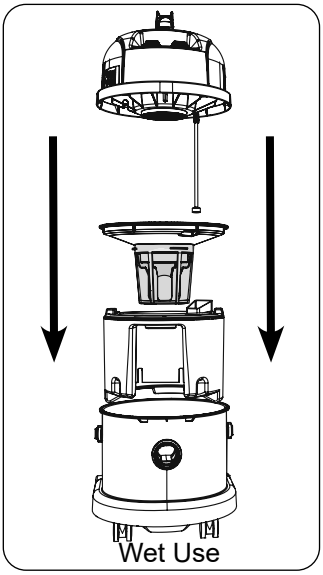
Wet Use

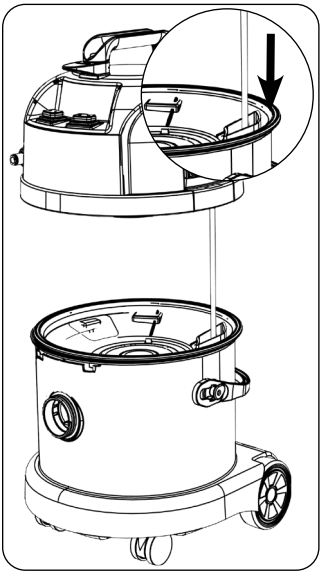

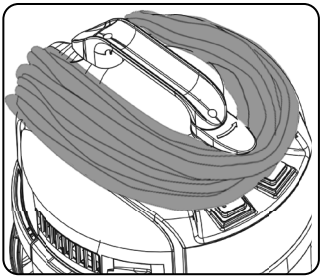

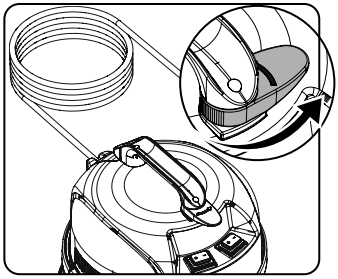

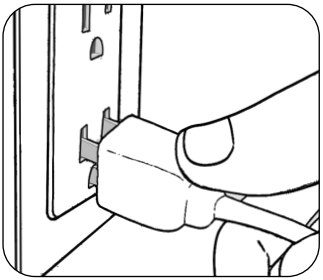

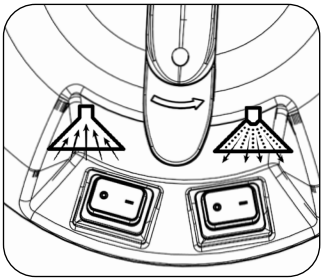

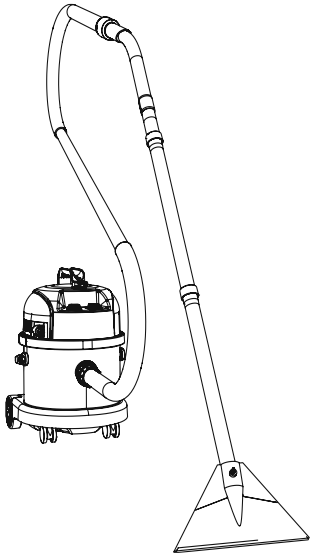

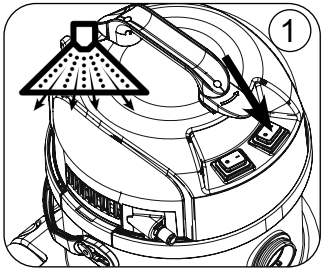
1

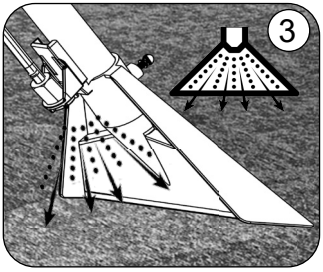
3

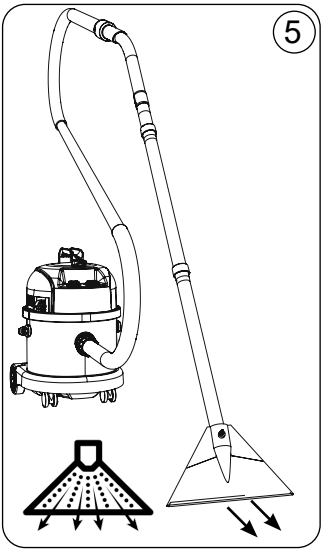
5

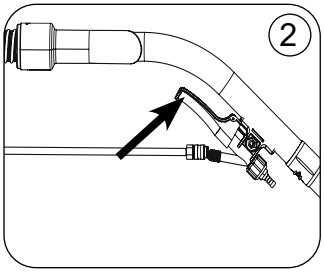
2

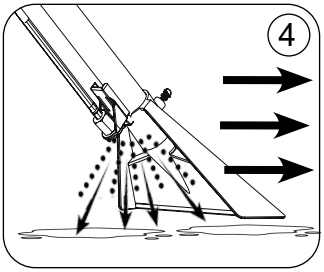
4

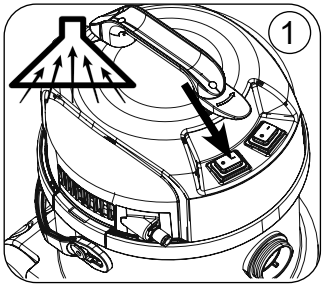
1

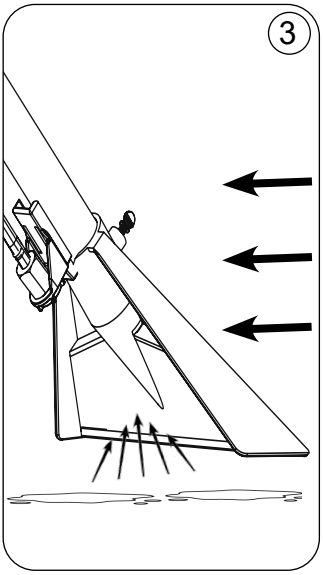
3

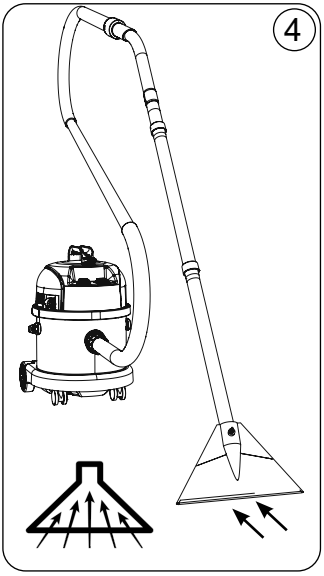
4

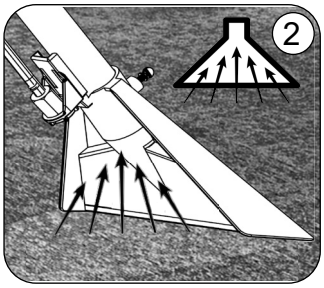
2

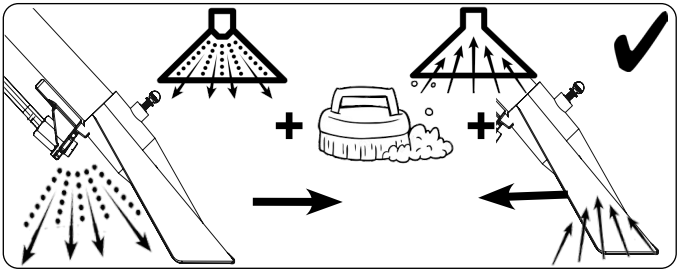

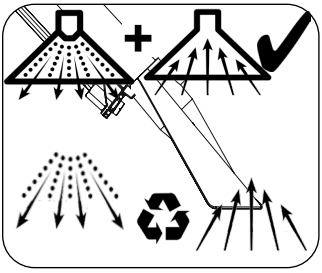

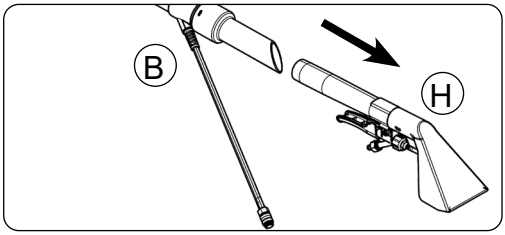
B
H

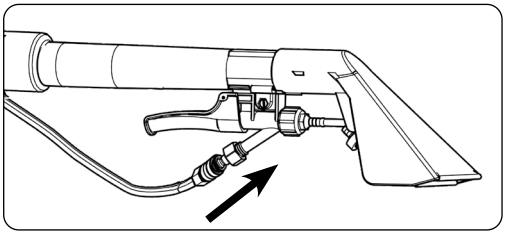

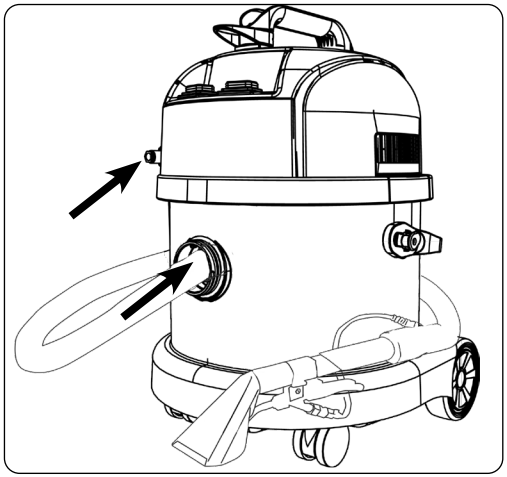

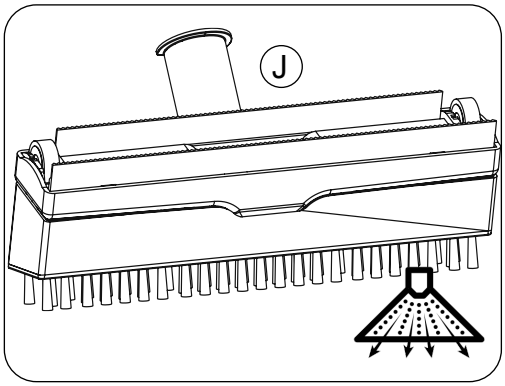
J

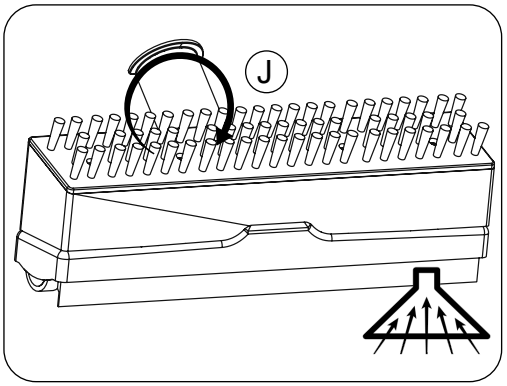
J

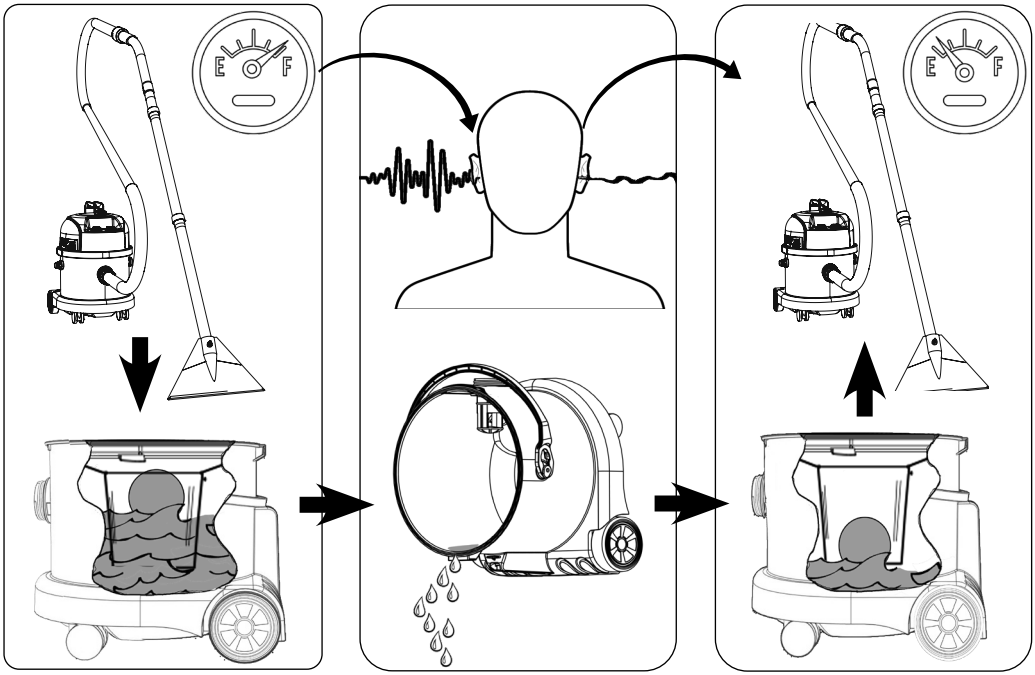
E
F
E
F

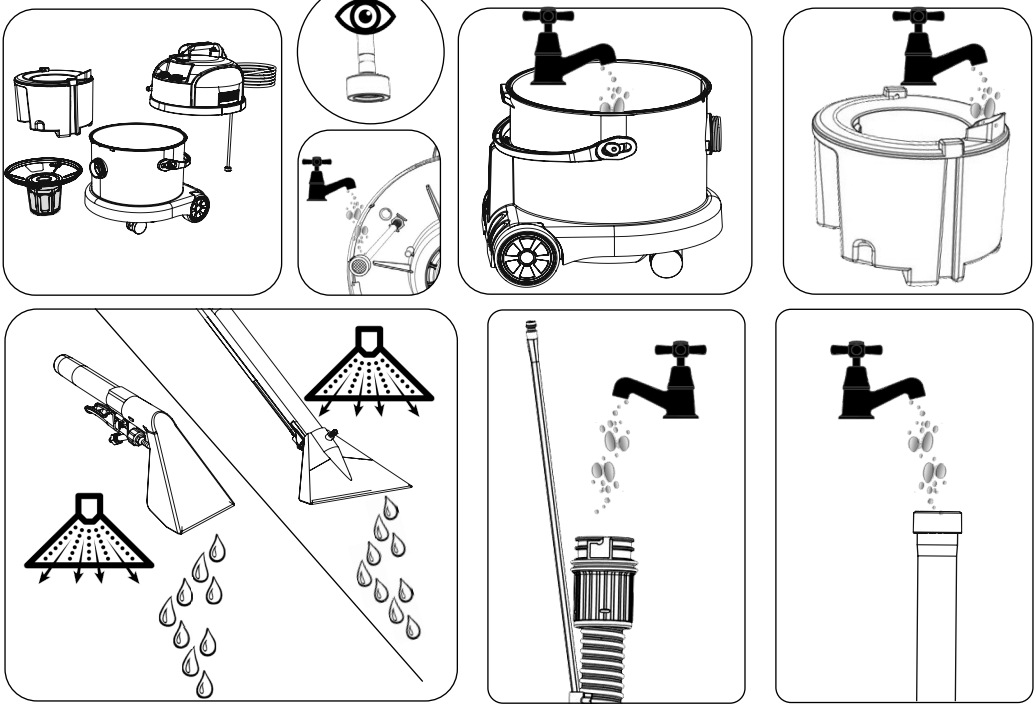

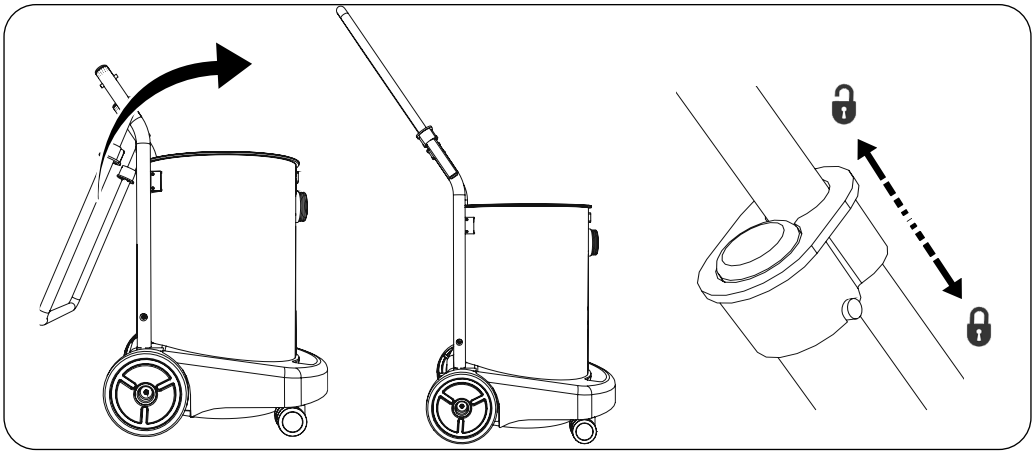

Assembling the machine for dry use

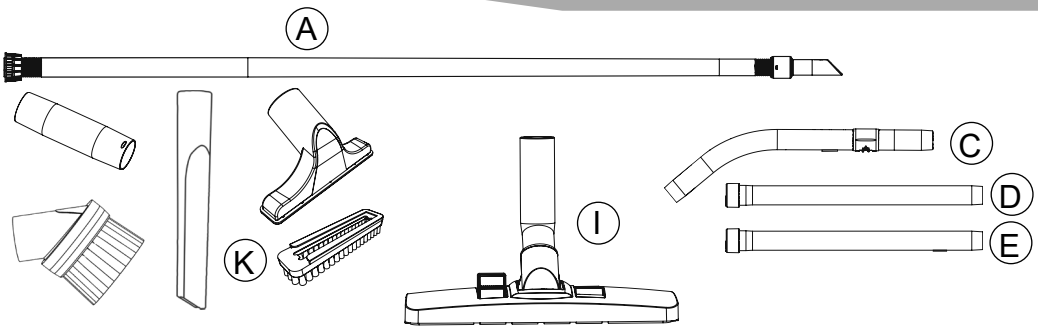

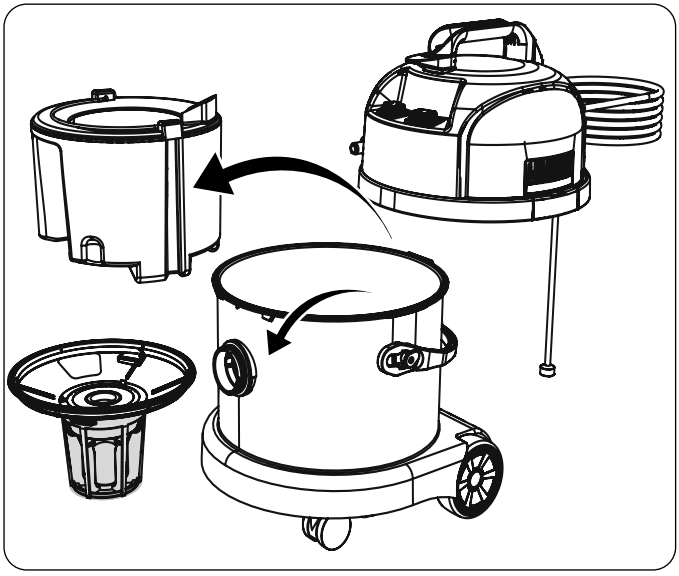

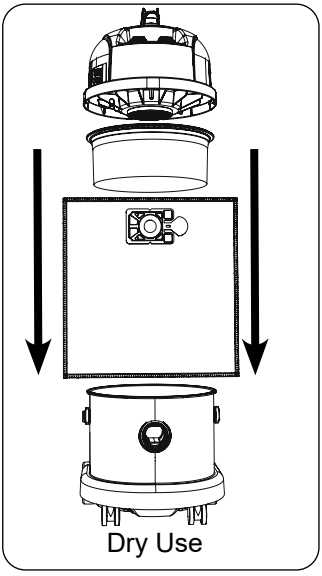

Dry Use

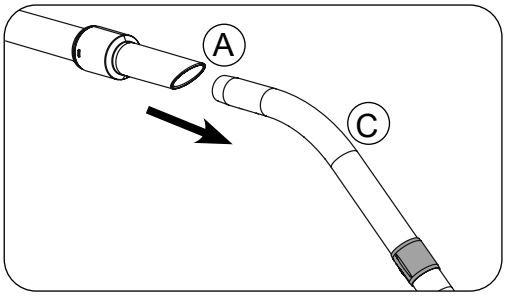

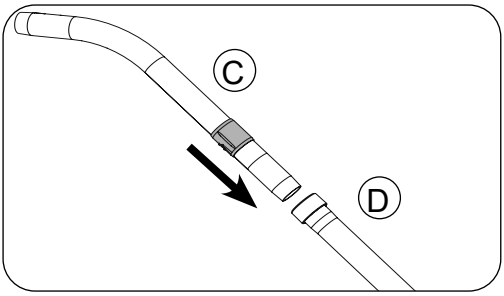

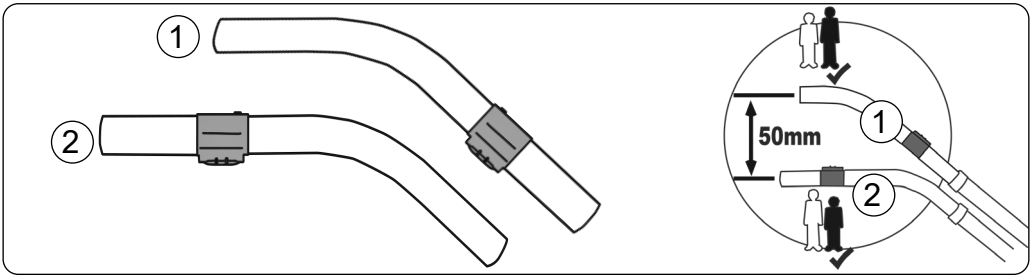

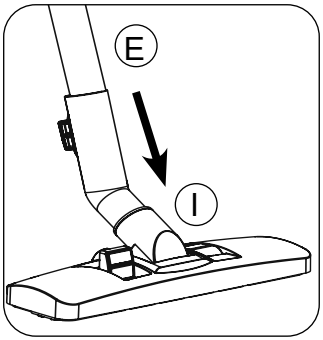

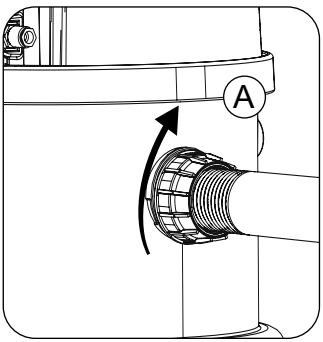

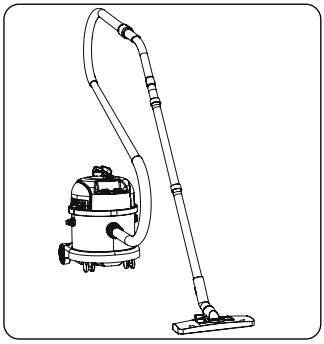

Dry - Using the machine

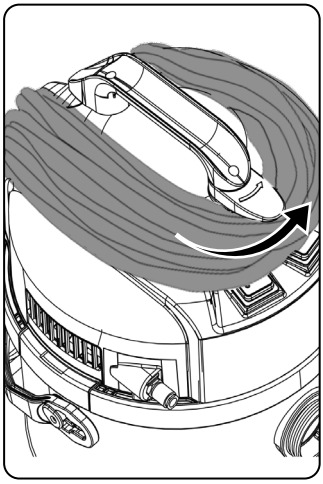

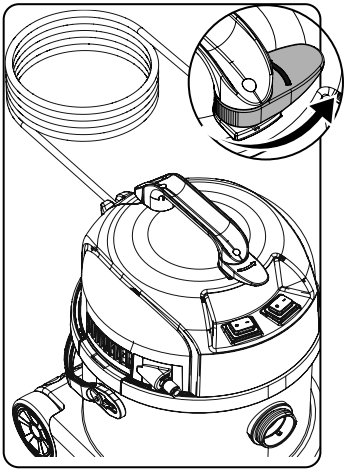

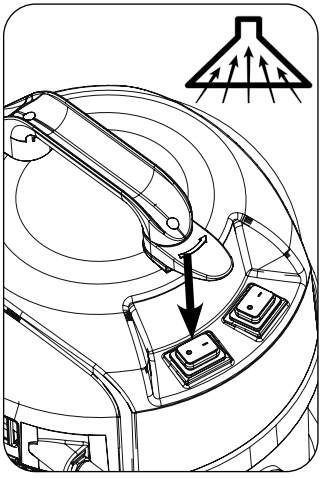

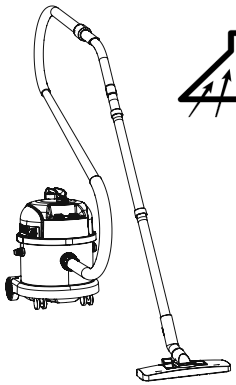

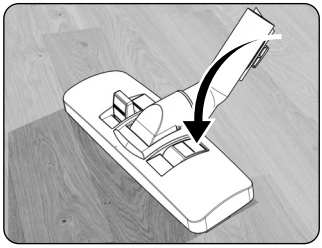

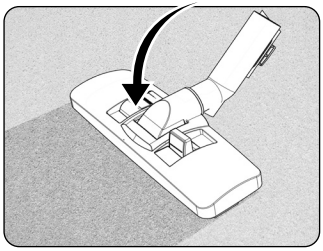

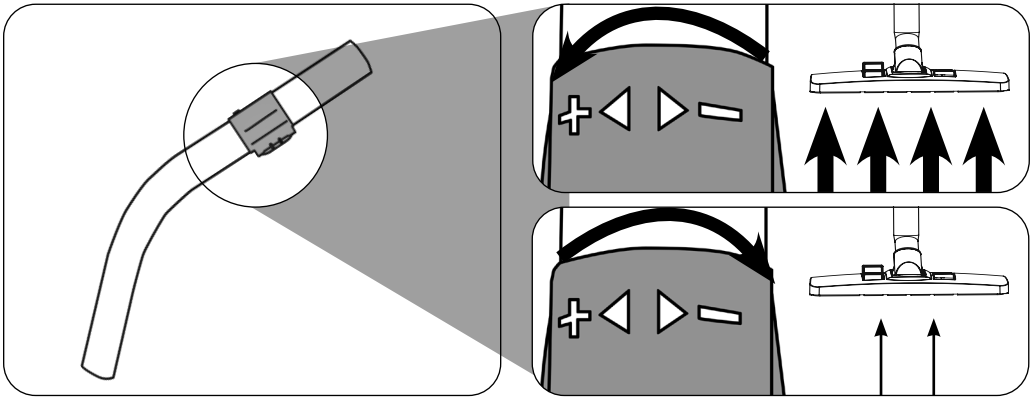

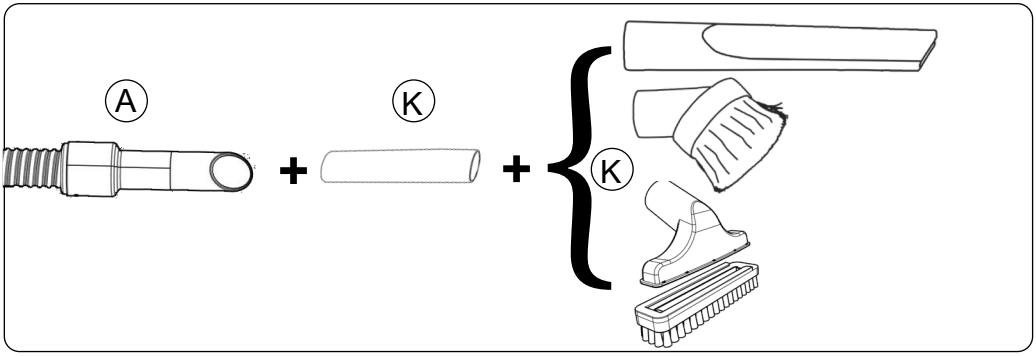
A
K
+
+
K

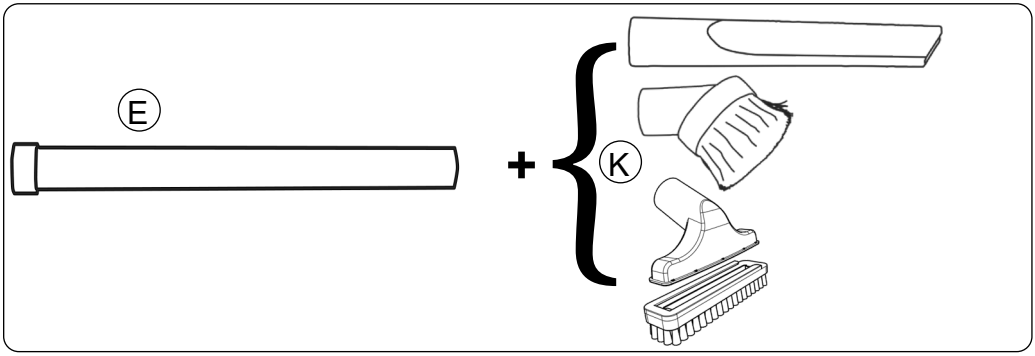
E
+
K

Floor Tool Tidy

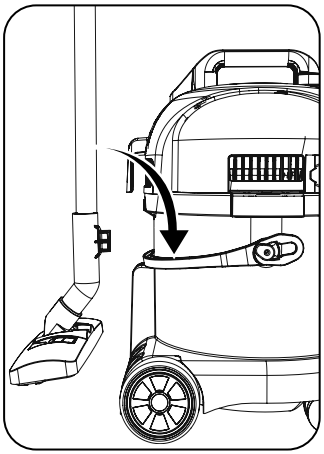

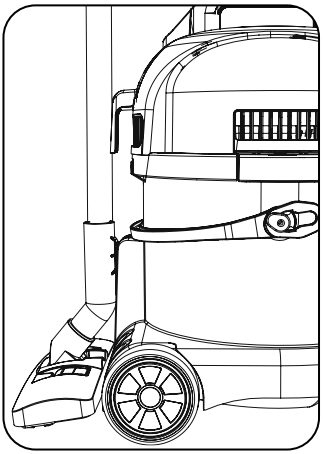

Accessory Tidy

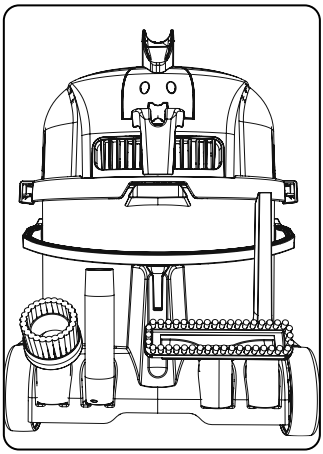

Dry - Emptying your Hepa Flo Bag

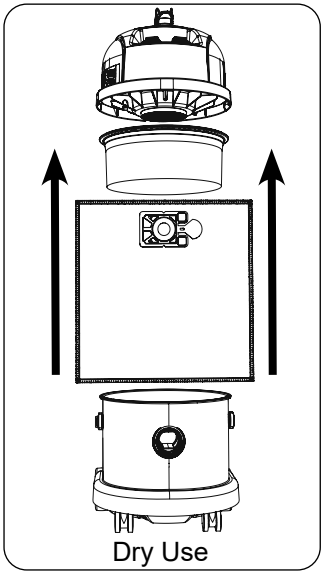

Dry Use

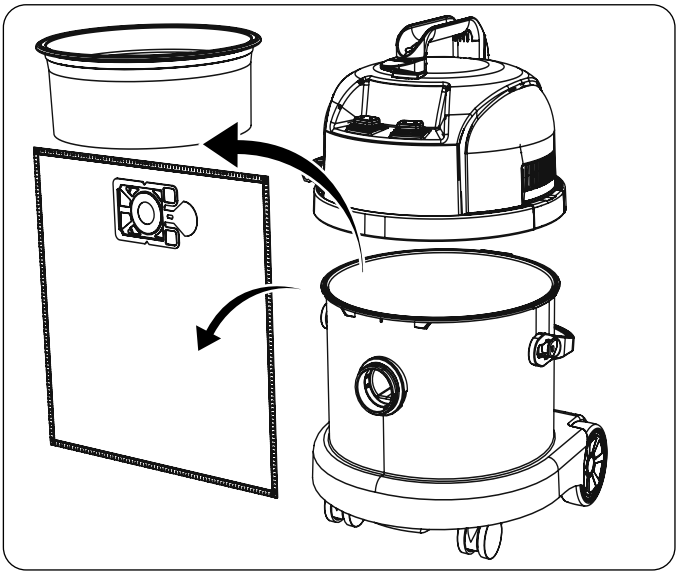

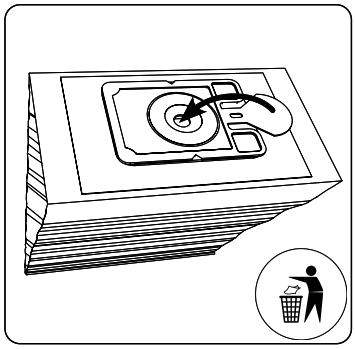

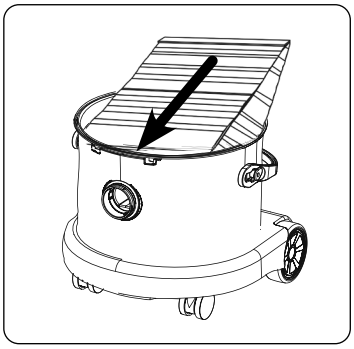

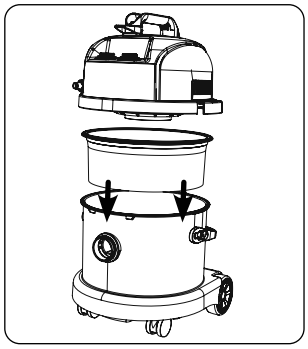

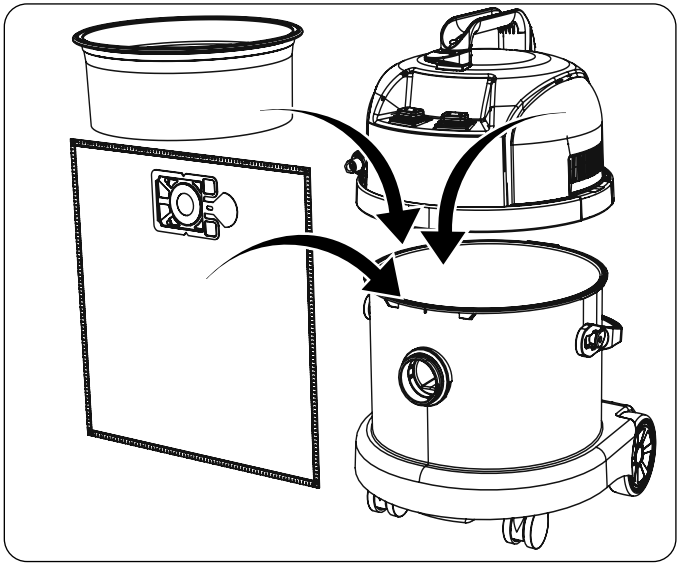

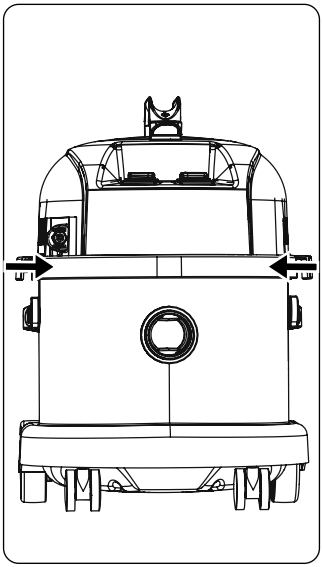

Schematic

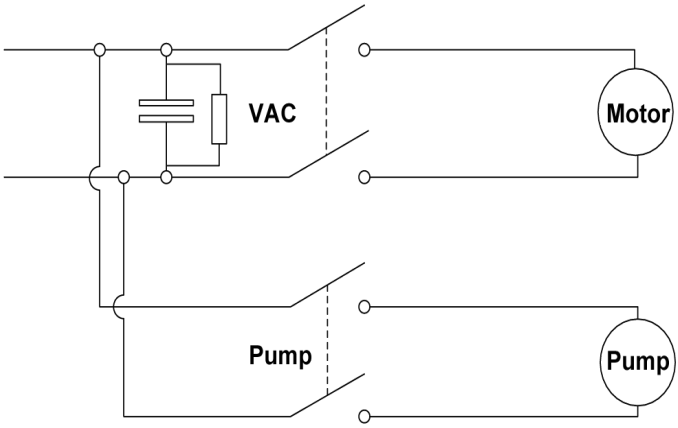

Data

Motor	AirFlo	Suction	Cleaning Range		Class
1000W	49 L/sec	2400mm	26.8m		II
Capacity Dry	**Capacity Wet**	**Solution Tank**	**Size (mm)**	**Sound Pressure (LpA) Uncertainty (KpA)**	**Weight**
370: 15 L 380: 15 L 470: 27 L	370: 9 L 380: 9 L 470: 20 L	370: 6 L 380: 6 L 470: 15 L	370: 360x370x510 380: 360x370x510 470: 360x370x710	78.6 dB (A) (Dry) 78.7 dB (A) (Wet) 0.5 dB	370: 11 kg 380: 11 kg 470: 12 kg

Recommended Spares

604016	370 / 380 (NVM 2BH) Pack of 10 bags	236029	Plugged Cable (Australian)
604018	470 (NVM 3AH) Pck of 10 bags	604165	TriTex Filter

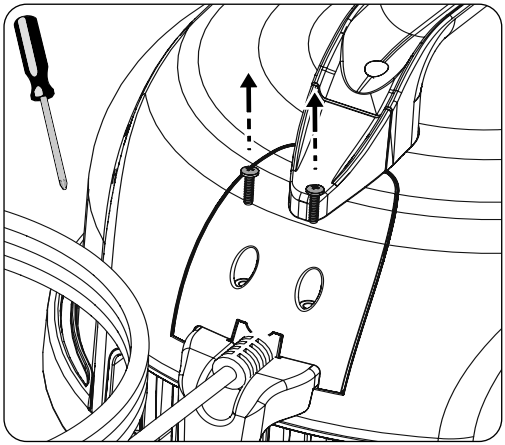

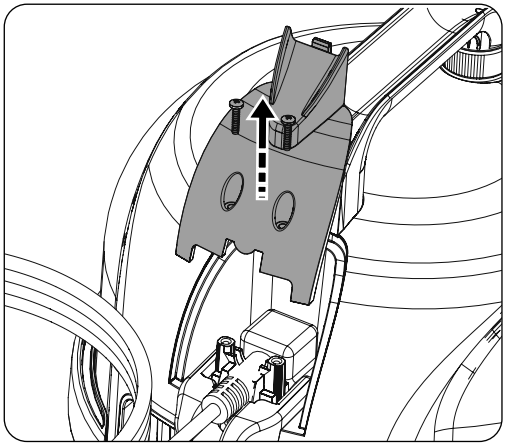

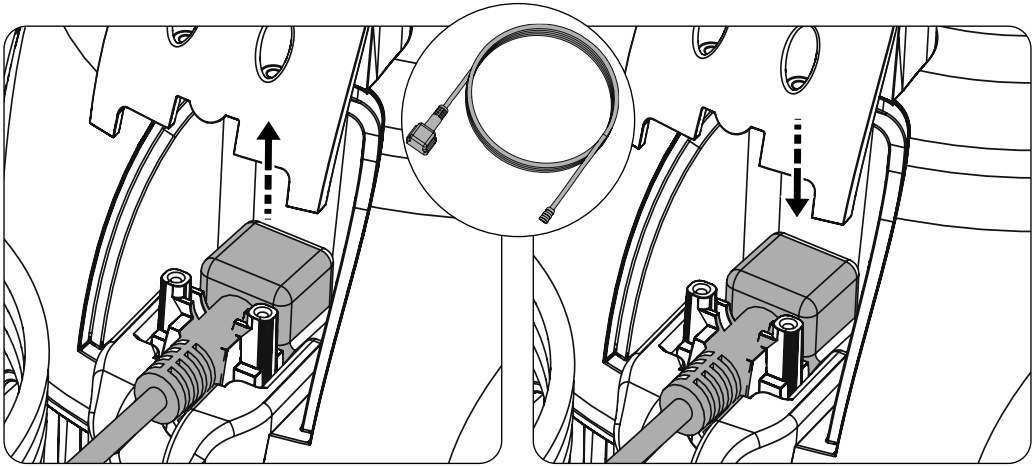

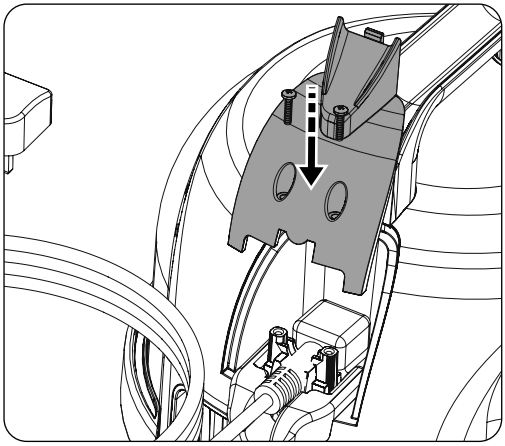

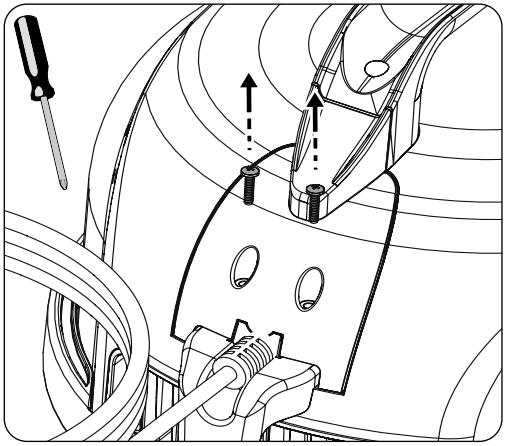

Rating Label

1	Company Name & Address
2	Model
3	Voltage/Alternating Current
4	Frequency
5	Rated Input Power
6	Weight
7	Ingress Protection
8	MAX Pressure
9	Approval Mark
10	Protection Class 2 Symbol
11	Machine yr/wk Serial Number

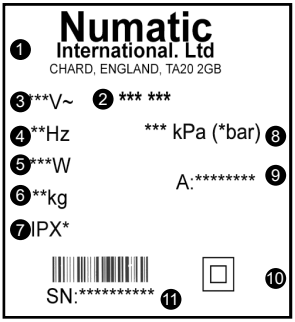

PPE (personal protective equipment) That may be required for certain operations.

Ear Protection	Safety Footwear	Head Protection	Safety Gloves	
Eye Protection	Protective Clothing	Dust / Allergens Protection	Hi Viz Jacket	Caution Floor Sign

Note: A risk assessment should be conducted to determine which PPE should be worn.

Failure to rectify the problem or in the event of a breakdown contact your Numatic dealer or the Numatic Technical helpline +44 (0)1460 269268

MAINTENANCE

Daily

Keep the machine clean, including hoses and tubes.
Ensure the bag and filter are fitted, (Dry use).
Empty dust bag if required.
Clean and check float safety valve for signs of damage.
Regularly examine the power cord.
Check filters are clean.

Weekly - as daily and:-

Check for any worn or damaged parts and replace immediately.

Safety Critical Components

Mains leads: HO5-VV-F 10 m x 2 Core x 1.00 mm^2

WARNING

Read the instruction manual before using the machine.
Operators shall be adequately instructed on the use of these machines.
As with all electrical equipment, care and attention must be exercised at all times during use, in addition to ensuring that routine and preventative maintenance is carried out periodically to ensure safe operation.
Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility in this respect.
The machine shall be disconnected from the mains by removing the plug from the power supply socket during cleaning or maintenance and when replacing parts or converting the machine to another function.
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
This appliance is intended to be assembled, cleaned and maintained by an adult.
This machine is not a toy.
This machine is not suitable for picking up hazardous or explosive dust. Contact your local distributor if you require a machine capable of performing these tasks.
If foam/liquid comes out of machine exhaust, switch off immediately. Allow the accumulated liquid to drain out through the machine exhaust, check the float assembly to ensure correct operation, empty the container if full of liquid, reassemble the machine.
Immediately upon start up there will be a certain amount of liquid issuing from the machine exhaust which will be the residue of liquid still within the power head. This will be quickly discharged after which the machine should function normally.
Liquid ejected from the machine could be hazardous as a result of its temperature, pressure or chemical content.

CAUTION

Ensure that the filtration system fitted to the machine is suitable for the material being collected.
Clean the water level limiting device regularly and examine it for signs of damage.
This machine is for indoor use only.
This machine shall be stored indoors only.
Wet filters and the interior part of the liquid container shall be dried before storage
When moving from one place to another, consider the weight of the machine.

NOTES

You must ensure that the filtration system fitted to the machine is suitable for the material being collected.
This product complies with the requirements of IEC/EN 60335-2-68.
This product complies with the requirements of clause 20 of IEC/EN 60335-2-69 for Stability and Mechanical Hazards.
This machine is intended for commercial use, for example in hotels, schools, hospitals, factories, shops, offices and rental businesses.
If the vacuum cleaner stops working, remove the plug from the power supply before investigating where the fault lies.
The vacuum cleaner should be inspected after use for damage.
The power light will illuminate, when your machine is connected to a suitable power supply (where fitted).

DO

● Use a bag and filter at all times when using the 'dry' function ● Keep your machine clean ● Keep filters clean ● Regularly clean the water level limiting float safety valve and examine for signs of damage or correct operation ● Keep hoses and tubes clear ● Replace any worn or damaged parts immediately ● Regularly examine the power cord, if damage is found, the power cord must be replaced by a special cord available from Numatic or its service agents ● Regularly examine the power cord. If the supply cord is damaged, it must be replaced by Numatic International Ltd, its service agent or similarly qualified persons in order to avoid a hazard ● Fill the liquid reservoir only with the liquid recommended by the manufacturer ● Flush the system with clean water after use ● After use always inspect the machine for damage.

DON'T

● Use steam cleaners or pressure washers to clean the machine or use the machine in the rain ● Immerse in water for cleaning ● Allow any inexperienced repairs. Call the experts ● Use wet if float valve is not functioning or fitted ● Use to suck up hot ashes, or lighted cigarette ends ● Run the machine over the power cable during operation as a hazard may occur ● Pull on the cable to unplug the machine from the power supply ● Walk over-wet carpets, upholstery or fabrics ● Walk on clean carpets until fully dry ● Attempt machine maintenance or cleaning unless the power supply plug has been removed from the supply outlet ● Under any circumstances place foreign objects including (but not limited to) air fresheners, air freshener capsules or scented beads of any type into the top filter of the machine. Doing so can be dangerous and risk damage to the machine and may invalidate the machine warranty.

This machine can be used for dry pick up, wet pick up and cleaning carpet and upholstery

Spray extraction machines only
• Use only approved cleaning preparations.
• Use defoamer if necessary.

Use of detergents
When using any detergent with this machine, please ensure you have read the safety data on the container and you are familiar with the procedures to clear up spills, inhalation, skin and eye contact.

Notes

Notes

Notes

Numatic

numatic.com

Numatic International Limited (Head Office)
Chard, Somerset TA20 2GB, UNITED KINGDOM
Tel: 01460 68600 numatic.com

Numatic International GmbH
Fränkische Straße 15-19, 30455 Hannover,
DEUTSCHLAND Tel: +49 (0) 511 984 2160 numatic.de

Numatic International Denmark
Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND
Tel: +45 (0) 316 40808 numatic-online.dk

Numatic International S.A.S
13/17 rue du Valengelier, EAE la Tuilerie, 77500 Chelles, FRANCE
Tel: +33 (0) 164 726 161 numatic.fr

Numatic International BV
Vennootsweg 15, 2404 CG, Alphen aan den Rijn, NEDERLAND
Tel: +31 (0) 172 467 999 numatic.nl

Numatic International Schweiz AG.
Sihlbruggstrasse 3A, 6340 Baar, SCHWEIZ
Tel: +41 (0) 41 768 0760 numatic.ch

Numatic International (PTY) Ltd.
Cnr. 16th & Pharmaceutical Road, Randjes Park,
Midrand 1685, SOUTH AFRICA
Tel: +27 (0) 861 686 284 numatic.co.za

Numatic International ULDA
Rua Francisco da Silva Duarte, nº79,
4475-269 Santa Maria de Avioso, Castêlo da Maia, PORTUGAL
Tel: +351 220 047 700 numatic.pt

Numatic International Spain, S.L.U.
Av. Baix Llobregat, 5-7, Oficina bajos 1 (Parc Negocis Mas Blau II)
08820 El Prat de Llobregat (Barcelona), SPAIN
Tel: +34 93 647 22 22 numatic.es

Numatic International Italy S.R.L
Via Luigi Galvani, 2, Z.I. Talponedo, 33080 Porcia (PN), ITALY
Tel: +39 (0) 434 046 211 numatic.it

Edco, Edgar Edmondson Pty Ltd
Head Office: PO Box 198, Marrickville, NSW 1475, AUSTRALIA
Delivery & Shipping Address
18 Garden St, Marrickville, NSW 2204, AUSTRALIA
Office Number: +61 (0)2 9557 4411, Fax Number: +61 (0)2 9519 9223,
Email: orders@edmondson.net.au ABN: 27 000 450 144

Proquip NZ Ltd
7a Peterkin Street, Taita, Lower Hutt, 5019
Tel: +64 4 566 7847, Fax: +64 4 576 0430
Web: www.proquipnz.co.nz

Specification subject to change without prior notice. All rights reserved.
numatic.com © Numatic International Limited

915151 08/25 (A07)